

CAUTION:

Make sure that the stand is in the final store location before assembling and loading products



Merchandiser components:

- Centre pole
- 2 white poly washers
- Bottom mounting bracket
- Top mounting bracket
- 8 black mushroom head screws
- 1 R clip
- 4 cable ties
- 4 header cards A.B.C.D (see page 2)
- 5 packs of product backing cards
- 4 side panels
- 3 corner panels
- 1 thread tester
- 4 corner panel stickers

Assembly instructions for Supercheap Auto rotary merchandiser

What you need:


- 2-person assembly minimum required
- Screwdriver (not supplied)

This stand is not compatible with any previous Champion merchandisers.

Part No. MERCHAUTO6-EMPTY 05-06-2024

Top mounting bracket



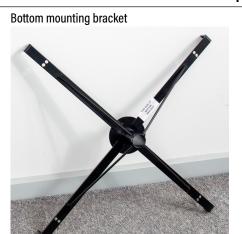



4 side panels



CAUTION: Under no circumstances move this merchandiser once fully assembled with stock loaded.



CAUTION: Under no circumstances move this merchandiser once fully assembled with stock loaded.

Step 1.



Place the centre pole at the chosen area for store sales. Slide 1 poly washer down the pole to sit on the centre pole flange.

Step 2.



Slide bottom mounting bracket down the pole with the label facing up and bracket lugs facing down, resting on poly washer. Rotate to ensure it turns freely.

Step 3.



With an assistant, install the four (4) panels into the locating holes in the bottom bracket. The assistant holds the 4 panels together.



Step 4.



With the assistant still holding the 4 side panels, slide the top mounting bracket down the pole to engage the top locating pins on the panel.









Step 5.







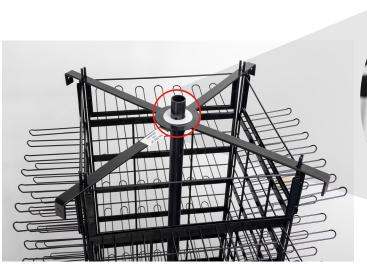

Using a little pressure downwards on the top of the mounting bracket, insert the R clip to lock everything together.



Step 6.



Use the 4 incuded cable ties to tightly secure the four side panels together, approximately midway. Snip off the excess length.

Make sure the heads of the cable ties are facing towards the inside of the stand.




Step 7.



Mount header cards A, B, C and D (see page 2) on top of the merchandiser, alphabetically and using a clock-ward rotation until all are secure.

Step 8.

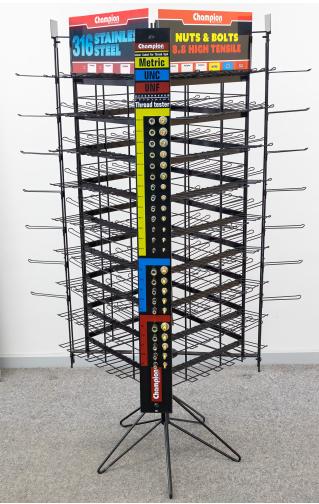

Mount the Champion thread tester with the black screws provided (screwdriver required). Place the thread tester on the left hand side of the 'bolts and nuts' header card.


Step 9.



Add the three stickers to the tops of the corners racks (there will be one sticker left over for this stand)

Step 10.







Step 11.









Place the backing-cards onto the pegs, following the supplied planogram. The backing-cards are in a left to right, top to bottom order.





No Backing cards on corner A due to thread tester.





The corner backing cards are in a top to bottom order. See the supplied planogram for reference.


Step 11. Continued



This is how the stand should look with the backing cards placed onto the stand.

Step 12



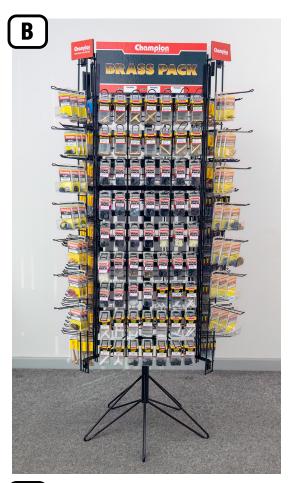






Place the blister packs onto the stand with the corresponding backing cards.

CAUTION: Under no circumstances move this merchandiser once fully assembled with stock loaded.

Step 12 Continued

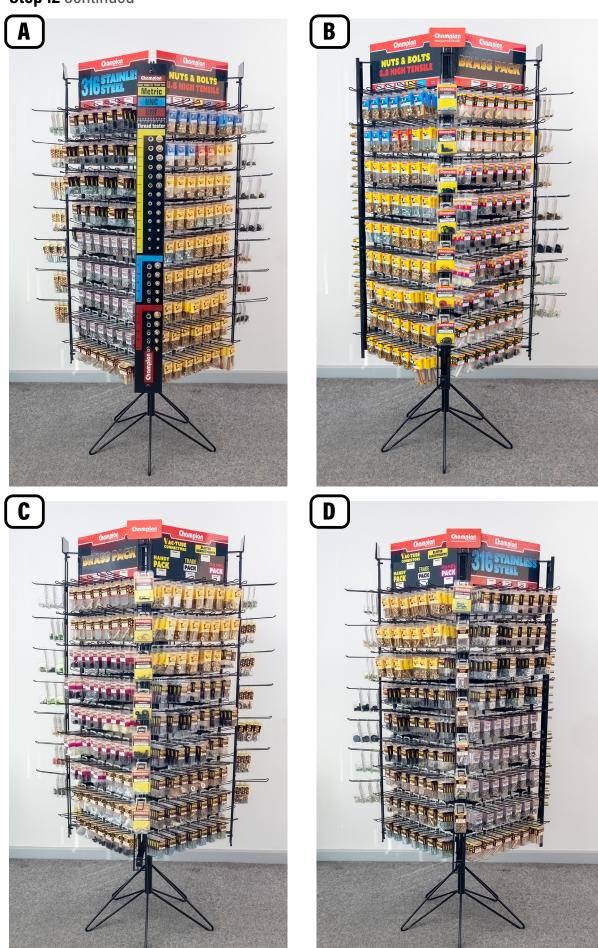

CAUTION: Under no circumstances move this merchandiser once fully assembled with stock loaded.